



X1

Portable High Resolution Music Player

Quick Start Guide

 
Before Using for the First Time

A. Charge the X1

- 1.Charges to full in ~3 hours using DC 5V/2A adapter (recommended)
- 2.Charges to full in over 5 hours using computer USB port (not recommended)

B.TF / Micro SD card

- 1.Recommended brands: Genuine Sandisk, Transcend, Kingston—Class 6 or above
- 2.Maximum supported size: 128G
- 3.Recommend formatting card to FAT32 format or inserting card into X1 for formatting
- 4.Inserting / removing TF / Micro SD card
 - i)Open rubber flap to reveal TF / micro SD card slot
 - ii)Insert card into slot and press into slot to install card
 - iii)Press card into slot again to eject card




Operating the X1

C.Basic Operations

Power on:Hold “Power/Lock” key for 2s, the screen will turn on and show the boot animation. On first power-on, the language selection menu will appear. Turn the scroll wheel to choose the desired UI language, press “OK” in the middle of the scroll wheel to confirm and enter the main menu.

Main menu: use the scroll wheel or the “previous” “next” buttons below the scroll wheel to choose between menu options, press “OK” to confirm and enter the corresponding entry.

 Data transfer: Use the included Micro USB cable to connect the X1 to the computer. X1’s display would show the below animation to confirm connection. The TF/Micro SD card you now insert/have inserted into the X1 will now appear on your computer and you may copy files to them.

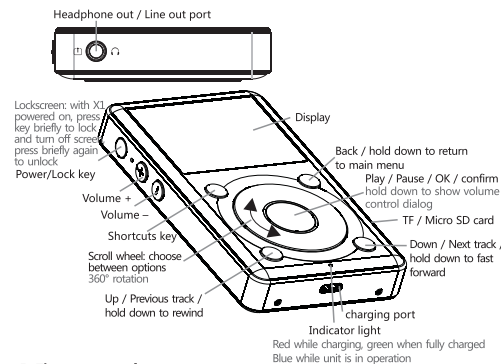


D.Firmware update

Improper operations during a firmware update may cause the X1 to malfunction! Please read the following guide to updating the firmware carefully before proceeding.

- Choose a TF card with FAT32 file system, preferably a blank card with capacity at or under 32GB.
 - Ensure that the X1 is sufficiently charged (preferably fully charged) before the update to prevent power failure during update.
- Upgrading via TF / Micro SD card:
- 1.Choose a card with FAT32 file system.

 - 2.Unzip the firmware package from FiiO and copy the x1.fw file within to the root directory of the TF / Micro SD card.
- 3.Turn off the X1 and insert the card (if not already inserted).
- 4.Hold the “Shortcuts” key (the key to the upper left of the scroll wheel) while pressing the “Power / Lock” button to turn on the X1. The following firmware update dialog will appear.
- 5.When the firmware update is complete, the X1 will restart automatically.



- Please delete the x1.fw file from the TF/Micro SD card after the update is complete.
- Please update the media library again after the firmware update.

Notes on usage

- ★ The X1 will skip any songs it has trouble decoding to prevent hang-ups.
- ★ If the charging current from the power adapter is too high, the X1 would switch off automatically and stop charging. Please switch to an appropriate charger; rating of DC5V/2A is recommended.
- ★ If a system error or hangup occurs, try pressing the reset button with a toothpick or hold the Power / Lock button for 6s to force a shutdown.
- ★ After copying songs to card(s) on the X1, the media library needs to be updated for songs to show on the category menus and play under all modes. “Update media lib” can be set to Manual or Auto under System Settings. The “Auto” setting is recommended.



Caution: The battery is not designed to be user-serviceable. Attempting to service or change the battery improperly may lead to explosion risk. Only batteries of the same type may be used in exchange for the original battery.

If the unit is to be left unused for a long time, please recharge the unit periodically to preserve its battery life. Batteries should not be exposed to direct sunlight, fire or other such high-temperature conditions.



This unit is not suitable for use in tropical climates.

5190175



X1

便携高清无损音乐播放器

快速入门手册

 
使用前准备

一、充电

- 1、适配器（DC 5V/2A）约3小时充满(推荐)
- 2、连接电脑应急补电大于5小时充满(不建议使用)

二、TF卡


- 1、推荐品牌：Sandisk、Transcend、Kingston—Class6及以上
- 2、最大支持TF卡容量大小为128G
- 3、推荐TF卡文件格式FAT32或者插入X1，由X1对其格式化
- 4、插入/取出Micro SD卡
 - a、轻轻按下Micro SD卡即可装入卡槽（如图所示）
 - b、再次按下即可将卡取出



三、机器接口及操作

开机：按下“电源/锁屏”键，保持2s，屏幕点亮进入开机动画界面；首次开机时，会弹出语言选择界面，旋转“圆盘”选中相应语言，按“确定”键进入主界面
菜单选择：在主界面，通过旋转“圆盘”或按“上翻”、“下翻”键切换各应用菜单图标，按“确定”键进入对应的应用

 数据传输：用附件中的Micro USB线连接X1和电脑，X1显示如下图，将TF卡插入X1,此时就可以将文件拷贝到TF卡中。

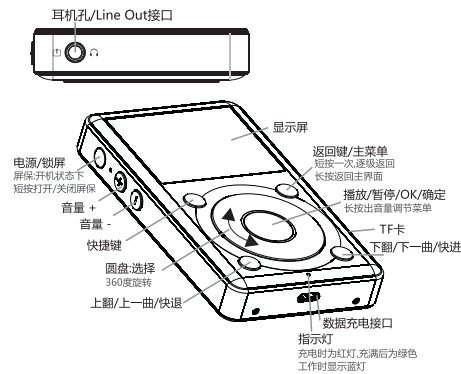

四、固件升级

固件升级可能会因错误操作而导致机器不能正常工作！请在升级前仔细阅读以下升级操作说明。
TF卡升级固件方法：将FiiO提供的x1.fw文件拷贝到FAT32格式下的TF卡根目录，关机后，将此卡插入卡槽中，按住“快捷键”再按“电源/锁屏”键开机，即可弹出TF卡升级对话框，升级进度条完成后会自动重启播放器。

固件升级中

升级成功



固件升级时应注意：TF卡容量最好在32G以内，并且是FAT32格式的空白卡，并确保X1的电量充足以免升级失败（最好是满电状态下）；升级过程中请不要操作机器；升级完成后，请将TF卡内的x1.fw文件删除；固件升级后，请重新更新歌曲库。

五、注意事项：

- ★遇到解码不正常的曲目会自动跳过；避免造成“假死”现象
- ★充电适配器电压过高,机器将自动关机并关闭充电,请选择合适的充电器,推荐DC 5V/2A充电器
- ★系统发生故障或死机时,尝试按复位键复位或按住复位键6秒强制关机
- ★需更新歌曲库才能正常使用分类播放及全部播放功能。



注意
电池更换不当会有爆炸危险
只能用同样类型或等效类型的电池来更换

当长期没有使用本产品时，需要对产品定期充电，以保证电池寿命，需注意，电池（电池包或组合电池）不得暴露在诸如日照、火烤或类似过热环境中。



表示仅适用于非热带气候条件下安全使用。