


# 正面

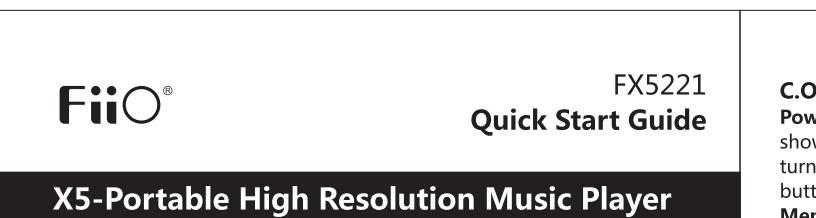


## X5-Portable High Resolution Music Player

### Before using for the first time

**A. Charge the X5**  
1. The X5 charges to full in about 4 hours using a DC 5V 2A charger. Any charger (including portable power banks and computer USB ports) that provide 5V at 450mA or above may be used to charge the X5.  
2. To achieve maximum charging speed, it is recommended to use chargers with 2A current output or more.

**B.TF/Micro SD card**  
1.Recommended brands: Genuine Sandisk, Transcend or Kingston--Class 6 or above  
2.Maximum supported size: 128GB(currently)  
3.Recommend formatting card to FAT32 format or inserting card into X5 for formatting  
4.Inserting / Removing Micro SD card  
i) Insert card into slot and press gently into slot (as pictured) to install card  
ii) Press card into slot again to eject card

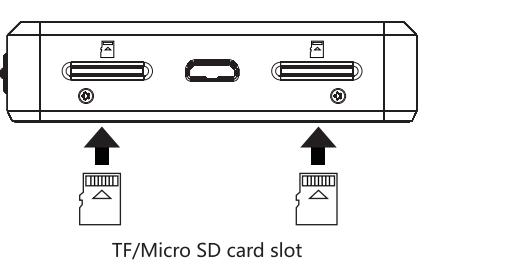

### FX5221

## Quick Start Guide

### C.Operating the X5

**Power on:** Hold the "Power / Lock" button for 2s, screen lights up and shows boot animation; on first power-up, language selection screen is shown; turn the scroll wheel to choose your preferred language and press the OK button in the middle of the wheel to confirm selection and enter main menu.  
**Menu operation:** Use the scroll wheel or the "previous", "next" buttons to choose between menu options, press "OK" to enter the corresponding sub-menu.

**Data selection:** Go to System Settings->USB Mode and press "OK" to set it to "Storage", and use the included Micro USB cable to connect the X5 to the computer. Upon successful connection, the X5 will display "USB connected. Please eject drives before disconnecting". The SD card on the X5 will now appear on your computer and you may copy files to it.

Line out / Coaxial out Headphone port



Power/Lock/ Status LED  
Lockscreen while X5 is powered on, press briefly to lock/unlock screen

Display screen

Back/Main menu

(press briefly to go back one menu level, press and hold to return to main menu)

Volume +

Volume -

Shortcuts button

Scroll wheel/ Item selection (rotates 360°)

Previous/Next song/Rewind

TF/Micro SD card slot

Data/Charging USB port

TF/Micro SD card slot (upgrade firmware via this slot)

Power/lock/ Status LED  
Lockscreen while X5 is powered on, press briefly to lock/unlock screen

Display screen

Back/Main menu

(press briefly to go back one menu level, press and hold to return to main menu)

Play/pause/OK/Confirm

(press and hold to change volume control dial)

Next/Next song/  
Fast forward

Shortcuts button

Scroll wheel/ Item selection (rotates 360°)

Previous/Next song/Rewind

TF/Micro SD card slot

Data/Charging USB port

TF/Micro SD card slot (upgrade firmware via this slot)

Power/lock/ Status LED  
Lockscreen while X5 is powered on, press briefly to lock/unlock screen

Display screen

Back/Main menu

(press briefly to go back one menu level, press and hold to return to main menu)

Play/pause/OK/Confirm

(press and hold to change volume control dial)

Next/Next song/  
Fast forward

Shortcuts button

Scroll wheel/ Item selection (rotates 360°)

Previous/Next song/Rewind

TF/Micro SD card slot

Data/Charging USB port

TF/Micro SD card slot (upgrade firmware via this slot)

Power/lock/ Status LED  
Lockscreen while X5 is powered on, press briefly to lock/unlock screen

Display screen

Back/Main menu

(press briefly to go back one menu level, press and hold to return to main menu)

Play/pause/OK/Confirm

(press and hold to change volume control dial)

Next/Next song/  
Fast forward

Shortcuts button

Scroll wheel/ Item selection (rotates 360°)

Previous/Next song/Rewind

TF/Micro SD card slot

Data/Charging USB port

TF/Micro SD card slot (upgrade firmware via this slot)

Power/lock/ Status LED  
Lockscreen while X5 is powered on, press briefly to lock/unlock screen

Display screen

Back/Main menu

(press briefly to go back one menu level, press and hold to return to main menu)

Play/pause/OK/Confirm

(press and hold to change volume control dial)

Next/Next song/  
Fast forward

Shortcuts button

Scroll wheel/ Item selection (rotates 360°)

Previous/Next song/Rewind

TF/Micro SD card slot

Data/Charging USB port

TF/Micro SD card slot (upgrade firmware via this slot)

Power/lock/ Status LED  
Lockscreen while X5 is powered on, press briefly to lock/unlock screen

Display screen

Back/Main menu

(press briefly to go back one menu level, press and hold to return to main menu)

Play/pause/OK/Confirm

(press and hold to change volume control dial)

Next/Next song/  
Fast forward

Shortcuts button

Scroll wheel/ Item selection (rotates 360°)

Previous/Next song/Rewind

TF/Micro SD card slot

Data/Charging USB port

TF/Micro SD card slot (upgrade firmware via this slot)

Power/lock/ Status LED  
Lockscreen while X5 is powered on, press briefly to lock/unlock screen

Display screen

Back/Main menu

(press briefly to go back one menu level, press and hold to return to main menu)

Play/pause/OK/Confirm

(press and hold to change volume control dial)

Next/Next song/  
Fast forward

Shortcuts button

Scroll wheel/ Item selection (rotates 360°)

Previous/Next song/Rewind

TF/Micro SD card slot

Data/Charging USB port

TF/Micro SD card slot (upgrade firmware via this slot)

Power/lock/ Status LED  
Lockscreen while X5 is powered on, press briefly to lock/unlock screen

Display screen

Back/Main menu

(press briefly to go back one menu level, press and hold to return to main menu)

Play/pause/OK/Confirm

(press and hold to change volume control dial)

Next/Next song/  
Fast forward

Shortcuts button

Scroll wheel/ Item selection (rotates 360°)

Previous/Next song/Rewind

TF/Micro SD card slot

Data/Charging USB port

TF/Micro SD card slot (upgrade firmware via this slot)

Power/lock/ Status LED  
Lockscreen while X5 is powered on, press briefly to lock/unlock screen

Display screen

Back/Main menu

(press briefly to go back one menu level, press and hold to return to main menu)

Play/pause/OK/Confirm

(press and hold to change volume control dial)

Next/Next song/  
Fast forward

Shortcuts button

Scroll wheel/ Item selection (rotates 360°)

Previous/Next song/Rewind

TF/Micro SD card slot

Data/Charging USB port

TF/Micro SD card slot (upgrade firmware via this slot)

Power/lock/ Status LED  
Lockscreen while X5 is powered on, press briefly to lock/unlock screen

Display screen

Back/Main menu

(press briefly to go back one menu level, press and hold to return to main menu)

Play/pause/OK/Confirm

(press and hold to change volume control dial)

Next/Next song/  
Fast forward

Shortcuts button

Scroll wheel/ Item selection (rotates 360°)

Previous/Next song/Rewind

TF/Micro SD card slot

Data/Charging USB port

TF/Micro SD card slot (upgrade firmware via this slot)

Power/lock/ Status LED  
Lockscreen while X5 is powered on, press briefly to lock/unlock screen

Display screen

Back/Main menu

(press briefly to go back one menu level, press and hold to return to main menu)

Play/pause/OK/Confirm

(press and hold to change volume control dial)

Next/Next song/  
Fast forward

Shortcuts button

Scroll wheel/ Item selection (rotates 360°)

Previous/Next song/Rewind

TF/Micro SD card slot

Data/Charging USB port

TF/Micro SD card slot (upgrade firmware via this slot)

Power/lock/ Status LED  
Lockscreen while X5 is powered on, press briefly to lock/unlock screen

Display screen

Back/Main menu

(press briefly to go back one menu level, press and hold to return to main menu)

Play/pause/OK/Confirm

(press and hold to change volume control dial)

Next/Next song/  
Fast forward

Shortcuts button

Scroll wheel/ Item selection (rotates 360°)

Previous/Next song/Rewind

TF/Micro SD card slot

Data/Charging USB port

TF/Micro SD card